


# REED

## Model R2000 Digital Stem Thermometer

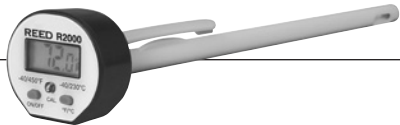

### Features

---

- °F to °C switchable
- Battery Included (LR44, 1.5V)
- Water resistant
- Five year warranty
- Hand wash only

### Specifications

---

- Temperature Range: -40 to 450°F (-40 to 230°C)
- Resolution: 0.1°F/°C
- Response Time: 8 seconds, with 2-second updates
- Accuracy:  $\pm 1.0^{\circ}\text{F}$ : 0 to 230°F;  $\pm 3.6^{\circ}\text{F}$ :  $< 0^{\circ}\text{F}$  &  $> 230^{\circ}\text{F}$

### Calibration

---

Once ice slurry is complete, if necessary, to change the calibration use a screwdriver, slowly turn the calibration screw (cal.) to the left to decrease the temperature reading or to the right to increase the temperature reading, until the display reads 32°F / 0°C.

### Replacing the battery

---

Use the same screwdriver to pry battery compartment door loose.

[www.reedinstruments.com](http://www.reedinstruments.com)